


| Code | Colour | Des. | Pos. | Description |
|----------|--------|----------|------|-----------------------------------|
| C18 | | C18 | C 3 | Connector, 15-pole |
| C19 | | C19 | D 3 | Connector, 21-pole, Instr-Roof |
| C25 | | C25 | C 3 | Connector, 15-pole |
| C145 | | C145 | D 2 | Connector, 1-pole |
| C146 | | C146 | D 2 | Connector, 1-pole |
| C148 | | C148 | D 2 | Connector, 1-pole |
| C490 | | C490 | D 6 | Connector, 1-pole |
| C8105 | | C8105 | B 8 | Connector, 21-pole |
| C8107 | | C8107 | D 6 | Connector, 1-pole |
| C8108 | | C8108 | D 6 | Connector, 1-pole |
| C8128 | | C8128 | B 5 | Socket, USB data |
| E130 | | E130 | D 3 | Control unit, infotainment system |
| G3-3 | | G3-3 | E 7 | Splice, ground |
| G8-3 | | G8-3 | B 7 | Splice, ground |
| N3 | | N3 | D 4 | Loud speaker, treble driver |
| N4 | | N4 | E 3 | Loud speaker, treble passenger |
| N5 | | N5 | E 3 | Loud speaker, CB-radio |
| N16 | | N16 | A 8 | Subwoofer |
| N20 | | N20 | B 3 | Loud speaker, door driver |
| N21 | | N21 | B 3 | Loud speaker, door passenger |
| O1 | | O1 | B 6 | Instrument cluster |
| P2.BX50 | | P2.BX50 | F 8 | Fuse socket, CEU |
| P2.CX151 | | P2.CX151 | F 7 | Fuse socket, CEU |
| P2.CX155 | | P2.CX155 | F 7 | Fuse socket, CEU |
| S4 | | S4 | F 8 | Switch, starter |
| U18 | | U18 | B 5 | Aux radio input |
| U19 | | U19 | D 1 | Aerial splitter |
| U19 | | U19 | F 5 | Aerial splitter |
| U24 | | U24 | F 4 | Microphone |
| U26 | | U26 | E 1 | Aerial, FM/AM, DAB, MOB, GPS |
| U26 | | U26 | F 5 | Aerial, FM/AM, DAB, MOB, GPS |

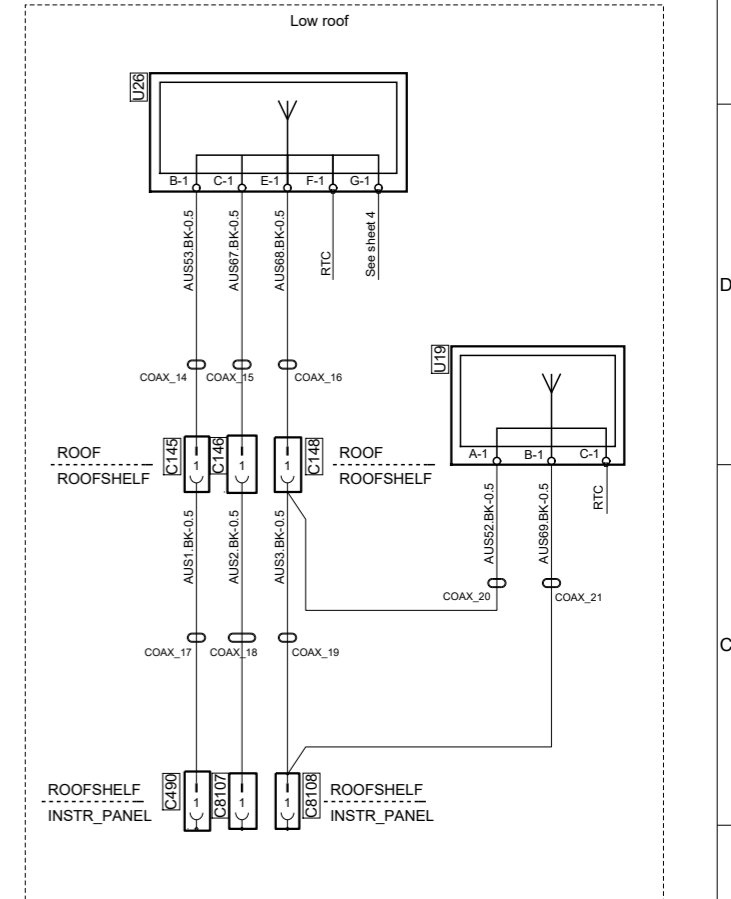

Notes:
 1. Standard
 2. Entry
 3. With C300
 4. Screen is connected to housings.
 For instruction, see corresponding Bundle Drawings

AUS Standard & Entry

SCANIA

Circuit Diagram:
AUS

Drawing No.-
 Sheet-Rev: **2086546-1-10**

N.B. The copyright and ownership of this drawing including associated computer data are and will remain ours. They must not be copied, used or brought to the attention of any third party without prior permission (C) Scania, Sweden