


Code	Colour	Des.	Pos.	Description
C18		C18	C 3	Connector, 15-pole
C19		C19	D 3	Connector, 21-pole, Instr-Roof
C25		C25	C 3	Connector, 15-pole
BN	Brown	C145	D 2	Connector, 1-pole
RD	Red	C146	D 2	Connector, 1-pole
OG	Orange	C148	D 2	Connector, 1-pole
YE	Yellow	C490	D 6	Connector, 1-pole
GN	Green	C8015	B 8	Connector, 21-pole
BU	Blue	C8107	D 6	Connector, 1-pole
VT	Violet	C8108	D 6	Connector, 1-pole
GY	Grey	C8128	B 5	Socket, USB data
WH	White	E130	D 3	Control unit, infotainment system
PK	Pink	G3-3	E 7	Splice, ground
		G8-3	B 7	Splice, ground
N3		D 4	D 4	Loud speaker, treble driver
N4		E 3	E 3	Loud speaker, treble passenger
N5		E 3	E 3	Loud speaker, CB-radio
N16		A 8	A 8	Subwoofer
N20		B 3	B 3	Loud speaker, door driver
N21		B 3	B 3	Loud speaker, door passenger
O1		B 6	B 6	Instrument cluster
P2.BX50		F 8	F 8	Fuse socket, CEU
P2.CX151		F 7	F 7	Fuse socket, CEU
P2.CX155		F 7	F 7	Fuse socket, CEU
S4		F 8	F 8	Switch, starter
U18		B 5	B 5	Aux radio input
U19		D 1	D 1	Aerial splitter
U19		F 5	F 5	Aerial splitter
U24		F 4	F 4	Microphone
U26		E 1	E 1	Aerial, FM/AM, DAB, MOB, GPS
U26		F 5	F 5	Aerial, FM/AM, DAB, MOB, GPS

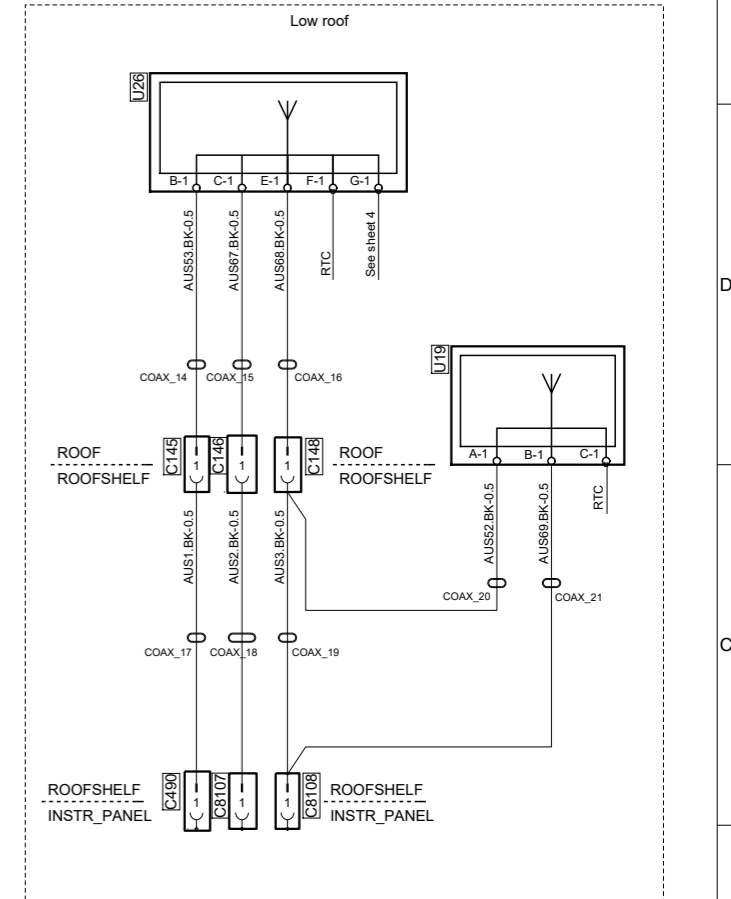

Notes:
 1. Standard
 2. Entry
 3. With C300
 4. Screen is connected to housings.
 For instruction, see corresponding Bundle Drawings

AUS Standard & Entry

SCANIA

Circuit Diagram:

AUS

Drawing No.- 2086546-1-12
 Sheet-Rev:

N.B. The copyright and ownership of this drawing including associated computer data are and will remain ours. They must not be copied, used or brought to the attention of any third party without prior permission (C) Scania, Sweden