


Code	Colour
BK	Black
BN	Brown
RD	Red
OG	Orange
YE	Yellow
GN	Green
BU	Blue
VT	Violet
GY	Grey
WH	White
PK	Pink

Des.	Pos.	Description
C18	C3	Connector, 15-pole
C19	D3	Connector, 21-pole
C25	C3	Connector, 15-pole
C145	C2	Connector, 1-pole
C146	C2	Connector, 1-pole
C148	C1	Connector, 1-pole
C261	E7	Connector, 21-pole
C490	D6	Connector, coax
BU	B7	Connector, 21-pole
C8015	B7	Connector, 21-pole
C8107	D6	Connector, 1-pole
C8108	D6	Connector, 1-pole
C8128	B5	Socket, USB data
E130	D3	Control unit, infotainment system
G3-3	D7	Splice, ground
G8-3	B7	Splice, ground
N3	D4	Loud speaker, treble driver
N4	E3	Loud speaker, treble passenger
N5	E3	Loud speaker, CB radio
N16	A8	Subwoofer
N20	B4	Loud speaker, door driver
N21	B3	Loud speaker, door passenger
O1	B6	Instrument cluster
P2.BX50	F8	Fuse socket, central electric unit
P2.CX151	F7	Fuse socket, central electric unit
P2.CX151	F7	Fuse socket, central electric unit
U18	B5	Radio input, aux
U19	D1	Splitter, aerial
U19	F5	Splitter, aerial
U24	F3	Microphone
U26	F5	Aerial, FM/AM, DAB, MOB, GPS
U26	D1	Aerial, FM/AM, DAB, MOB, GPS
U44	D2	Aerial, FM/AM, DAB

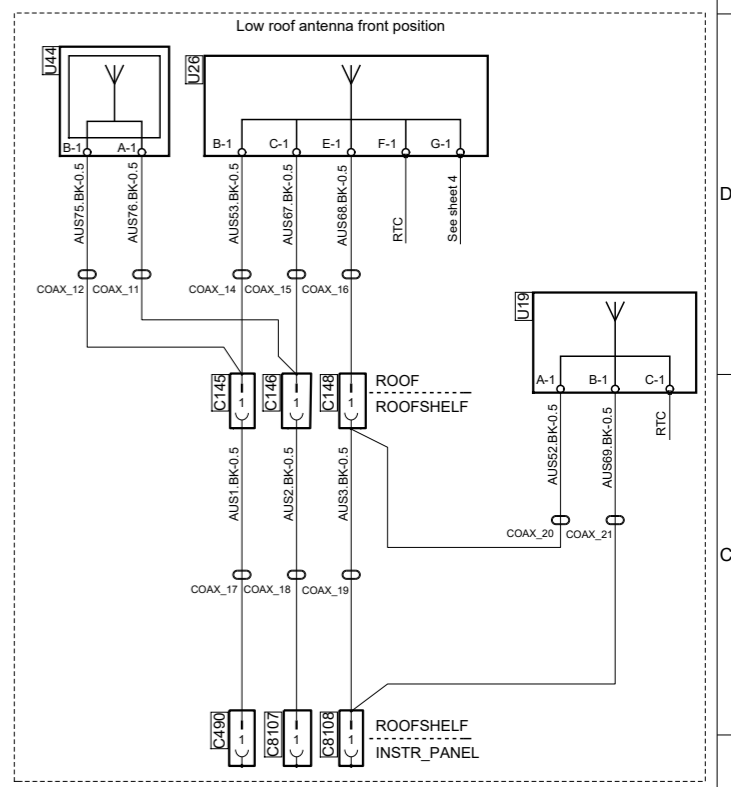

Notes:  
 1. Standard  
 2. Entry  
 3. With C300  
 4. Screen is connected to housings.  
 For instruction, see corresponding Bundle Drawings

AUS Standard & Entry

S-order equipment connected

**SCANIA**

Circuit Diagram:  
**AUS**

Drawing No.-  
 Sheet-Rev: **2086546-1-29**

N.B. The copyright and ownership of this drawing including associated computer data are and will remain ours. They must not be copied, used or brought to the attention of any third party without prior permission (C) Scania, Sweden