


SCANIA



18:01-13

Edition 01



Stänkskärm
Mudguard
Kotflügel
Spatscherm
Guardabarros
Aile
Parafango
Lokasuoja
Błotnik
Pára-lama

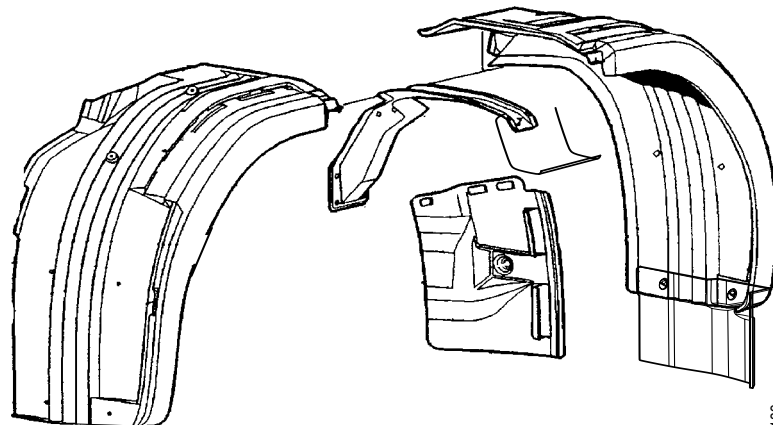

116 189

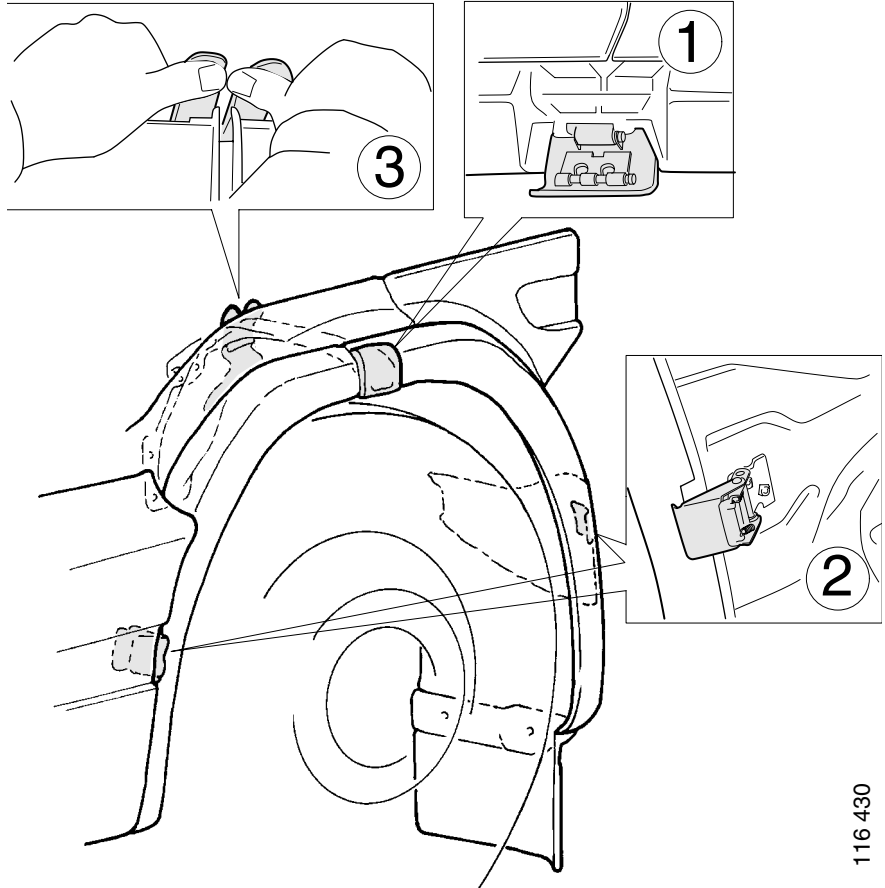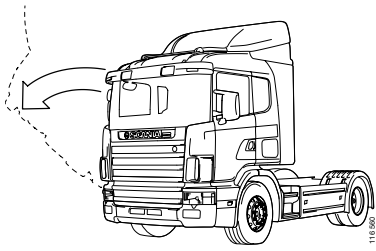

116 430

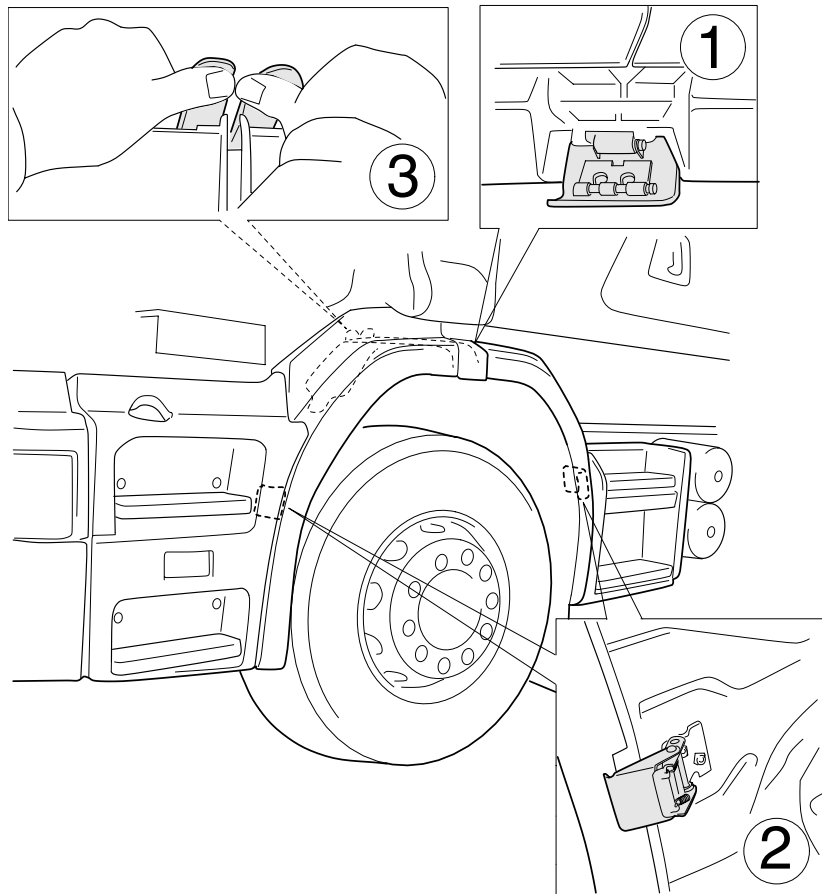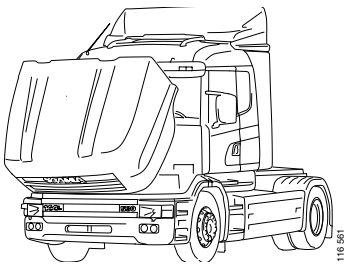

116 562