
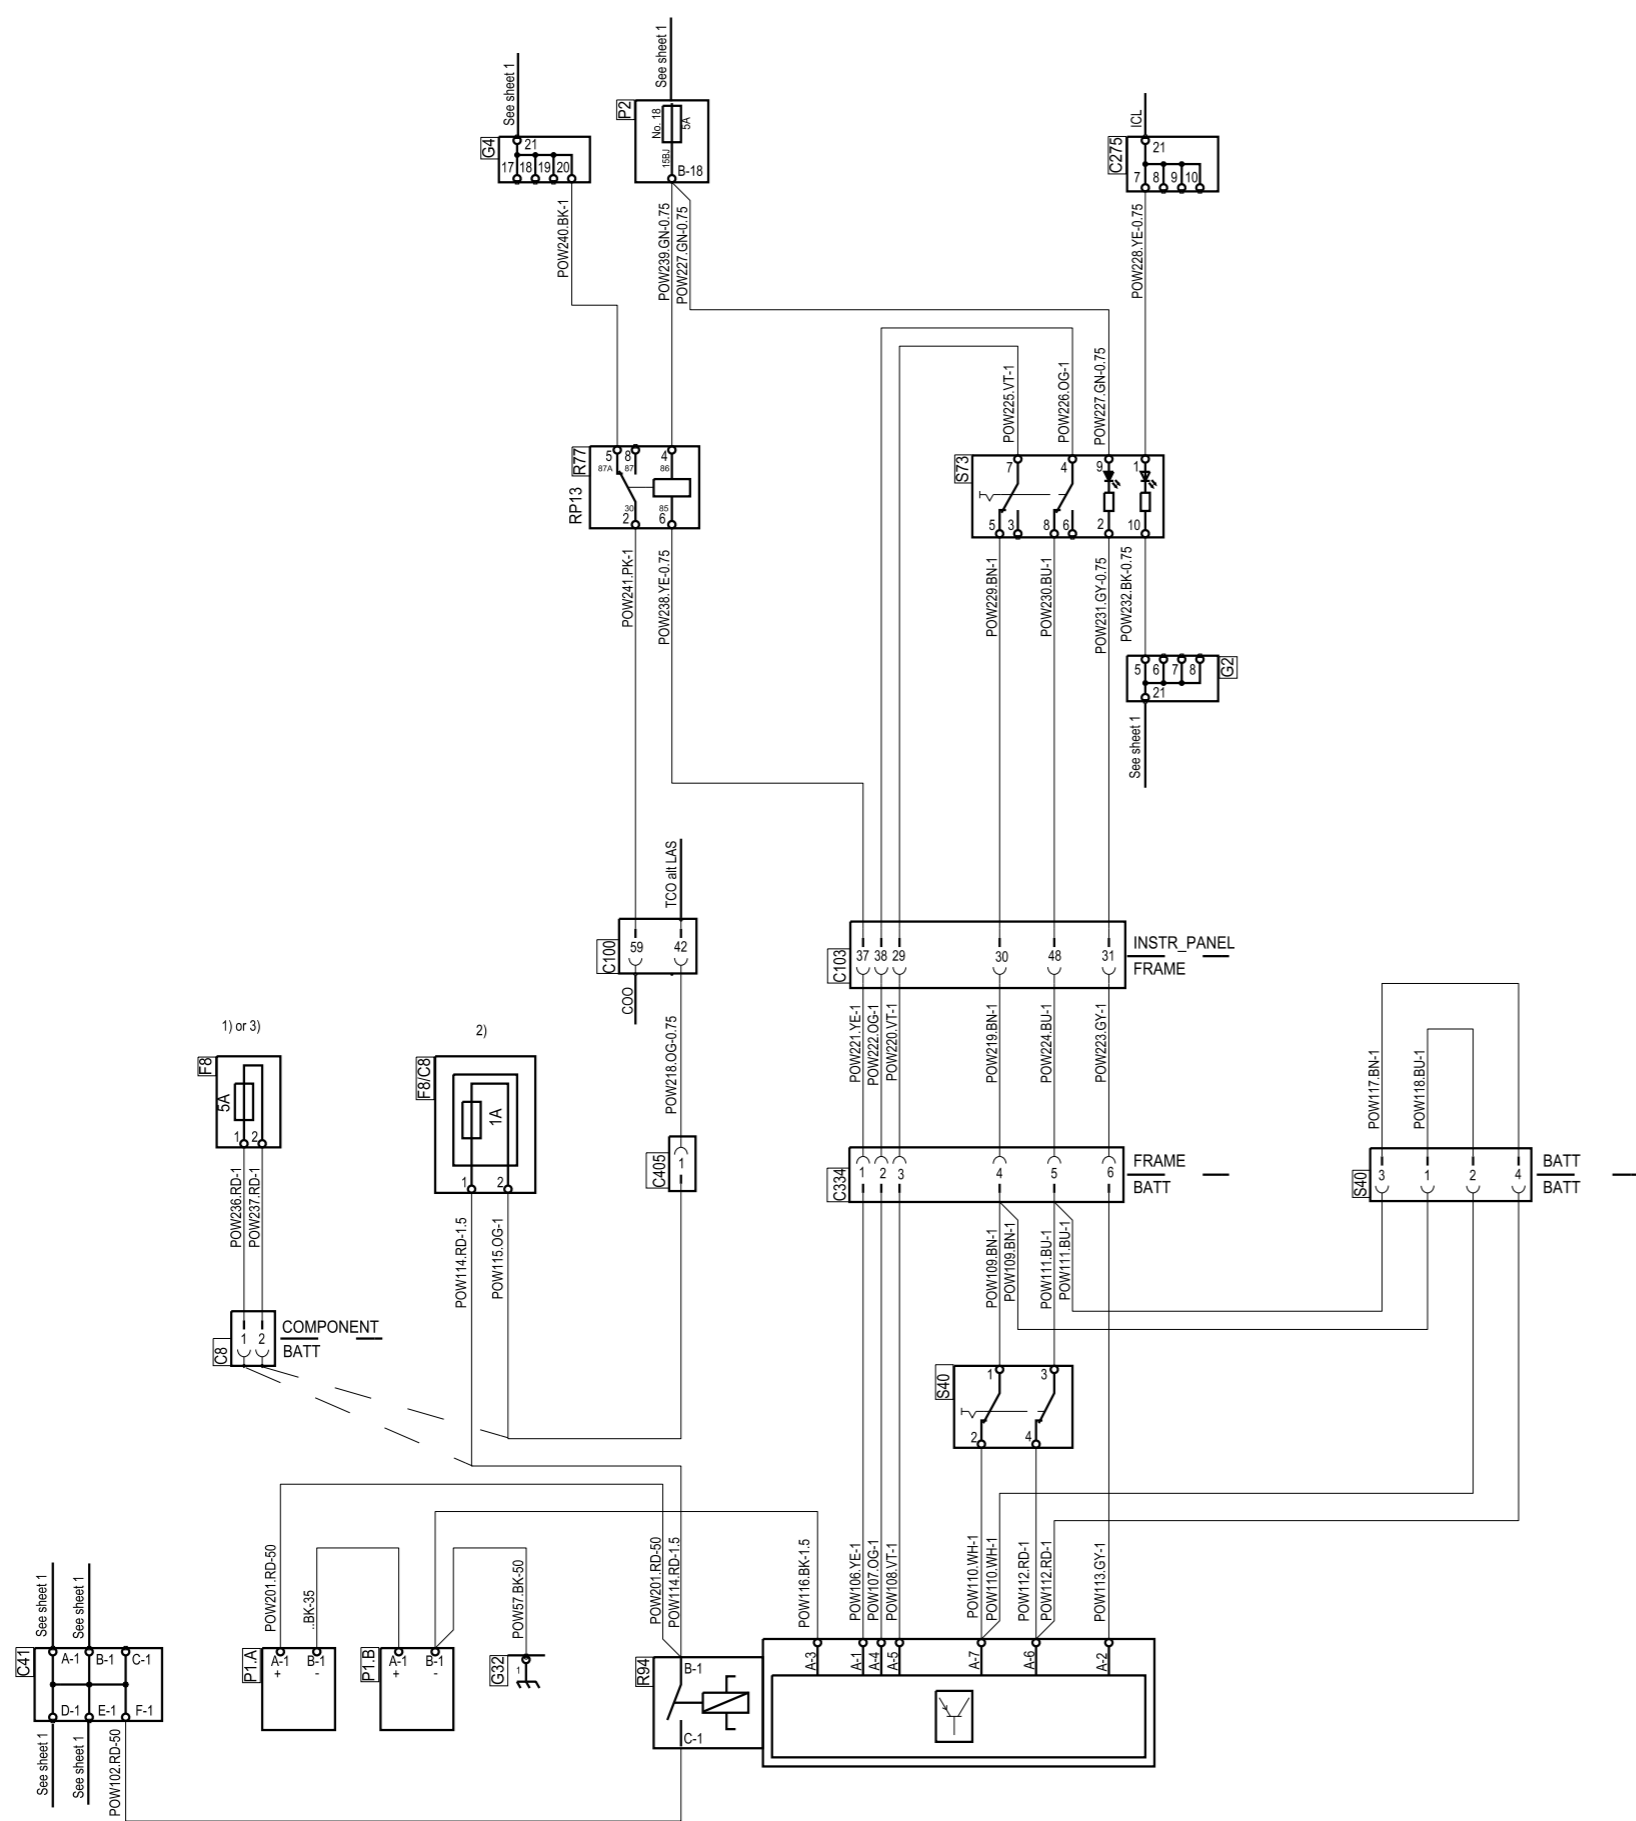


| Colour code of electric cables | |
|--------------------------------|--------|
| Code | Colour |
| BK | Black |
| BN | Brown |
| RD | Red |
| OG | Orange |
| YE | Yellow |
| GN | Green |
| BU | Blue |
| VT | Violet |
| GY | Grey |
| WH | White |
| PK | Pink |

| Des. | Pos. | Description |
|-------|------|-------------------------------|
| C8 | C 10 | Connector, 2-pole |
| C41 | B 10 | Junction block |
| C100 | E 8 | Connector, 66-pole |
| C100 | E 9 | Connector, 66-pole |
| C100 | E 8 | Connector, 66-pole |
| C103 | E 8 | Connector, 66-pole |
| C275 | H 6 | Joint connector, instr light |
| C334 | D 8 | Connector, 6-pole |
| C405 | D 8 | Connector, 2-pole |
| F8 | D 10 | Fuse |
| F8/C8 | D 9 | Fuse |
| G2 | F 6 | Joint connector, ground |
| G4 | H 9 | Joint connector, ground |
| G32 | B 8 | Ground, frame |
| P1.A | B 10 | Battery |
| P1.B | B 9 | Battery |
| P2 | H 8 | Central electric unit |
| R77 | G 8 | Relay, ADR, instr |
| R94 | B 7 | Relay, ADR, battery switch |
| S40 | C 7 | Switch, battery master switch |
| S40 | D 6 | Switch, battery master switch |
| S73 | G 7 | Switch, ADR, POW |

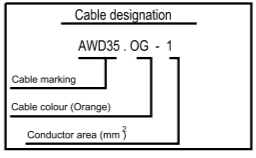

With battery master switch safety and activity in Cab and Frame
 Battery box position :XM 3260 and XM 5266
 1) with ADR class EX/II or EX/III or AT or OX
 2) with ADR class FL.
 3) without ADR.

STD
4247

SCANIA

Circuit Diagram:

POW

Drawing No.-
Sheet-Rev: 1395800-3-13

N.B. The copyright and ownership of this drawing including associated computer data are and will remain ours. They must not be copied, used or brought to the attention of any third party without prior permission (C) Scania, Sweden