


Code	Colour	Des.	Pos.	Description
C18	C3	Connector, 15-pole		
C19	D3	Connector, 21-pole		
C25	C3	Connector, 15-pole		
C145	C2	Connector, 1-pole		
C146	C2	Connector, 1-pole		
C148	C1	Connector, 1-pole		
YE	Yellow	E7	Connector, 21-pole	
C261	E7	Connector, 21-pole		
C490	D6	Connector, coax		
BU	Blue	C8015	B7	Connector, 21-pole
VT	Violet	C8107	D6	Connector, 1-pole
GY	Grey	C8108	D6	Connector, 1-pole
WH	White	C8128	B5	Socket, USB data
PK	Pink	E130	D3	Control unit, infotainment system
G3-3	D7	G3-3	D7	Splice, ground
G8-3	B7	G8-3	B7	Splice, ground
N3	D4	N3	D4	Loud speaker, treble driver
N4	E3	N4	E3	Loud speaker, treble passenger
N5	E3	N5	E3	Loud speaker, CB radio
N16	A8	N16	A8	Subwoofer
N20	B4	N20	B4	Loud speaker, door driver
N21	B3	N21	B3	Loud speaker, door passenger
O1	B6	O1	B6	Instrument cluster
P2.BX50	F8	P2.BX50	F8	Fuse socket, central electric unit
P2.CX151	F7	P2.CX151	F7	Fuse socket, central electric unit
P2.CX155	F7	P2.CX155	F7	Fuse socket, central electric unit
U18	B5	U18	B5	Radio input, aux
U19	D1	U19	D1	Splitter, aerial
U19	F5	U19	F5	Splitter, aerial
U24	F3	U24	F3	Microphone
U26	F5	U26	F5	Aerial, FM/AM, DAB, MOB, GPS
U26	D1	U26	D1	Aerial, FM/AM, DAB, MOB, GPS
U44	D2	U44	D2	Aerial, FM/AM, DAB

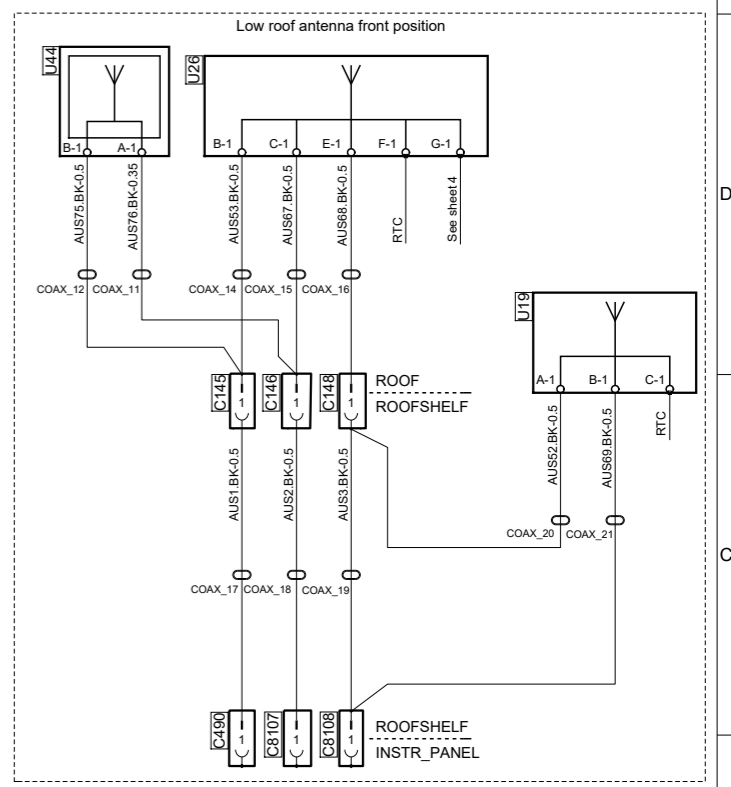

Notes:
 1. Standard
 2. Entry
 3. With C300
 4. Screen is connected to housings.
 For instruction, see corresponding Bundle Drawings

AUS Standard & Entry

S-order equipment connected

SCANIA

Circuit Diagram:
AUS

Drawing No.-
 Sheet-Rev: **2086546-1-30**

N.B. The copyright and ownership of this drawing including associated computer data are and will remain ours. They must not be copied, used or brought to the attention of any third party without prior permission (C) Scania, Sweden